

# SMGM | SMGX

**COMMUNICATION SYSTEMS** 



# **SMGM | SMGX - KEY HIGHLIGHTS**


#### WIDE RANGE OF APPLICATIONS

With the vCOM product family for mobile data transmission, VAHLE serves indoor installations with the SMGM as well as outdoor installations with the SMGX. This product variety offers a selection for different segment lengths and mechanical tolerances.




#### **STEADY SIGNAL QUALITY**

Low-wear skids and a pressure spring provide a stable mechanical guide and steady immersion depth of the data coupler into the SMG profile, guaranteeing secure signals

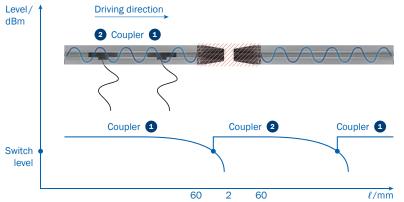

#### **HF-SECURE**

The SMG profile's interference-free design prevents signals from transmitting beyond the aluminum housing, allowing it to work alongside other industrial free radio systems. A radio license is not required. All HF components are factory tested and measured before each delivery,

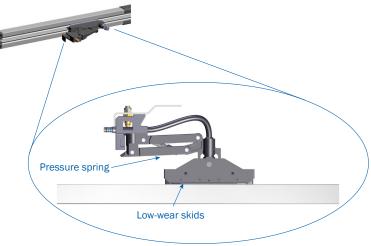


#### **RELIABLE DATA TRANSMISSION**

Connected data couplers ease segment transitions allowing for interruption-free data transmission. VAHLE's SMGM technology is suitable for use in people-safe applications.

#### TRANSPARENT SYSTEM

Data transmission through SMGM occurs wirelessly within the SMG profile and no changes to the data occur during the transfer (packet-oriented). The SMGM interface does not require IP addresses.

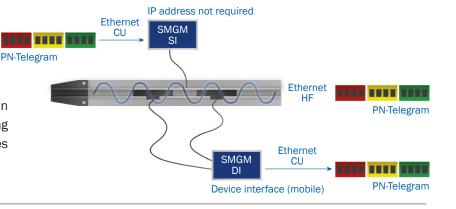

# **SMGM | SMGX - OPERATION**


Modern production requires expansive volumes of data transmission for diagnosis and management. While this data is often transmitted for simple transport tasks in mobile applications via concutor linces with low transmission rates, this method of communication cannot stand up to the requirements of more complex applications that demand higher data rates. The data communication system SMGM (Slotted Microwave Guide Mini) was especially developed for these applications and enables the integration of fail-safe data transmission into proven VAHLE conductor systems.

The SMGM system is especially recommended for indoor applications, for example for EMS, skillet and shuttle systems.


The SMGX system was developed on the basis of the SMGM system and is based on the same functional principle. The main differ-


#### **FUNCTIONAL PRINCIPLE**

The data transmission between the stationary management and the users on the mobile side occurs as locally restricted high frequency communication via slotted hollow conductor. The transmisson path is divided into separatly feeded segments due to the attenuation properties of the slotted hollow conductor mechanics. The maximum length of a segment is defined by the amount of users per segment and the used cable lengths. This is determinded in the level calculation.

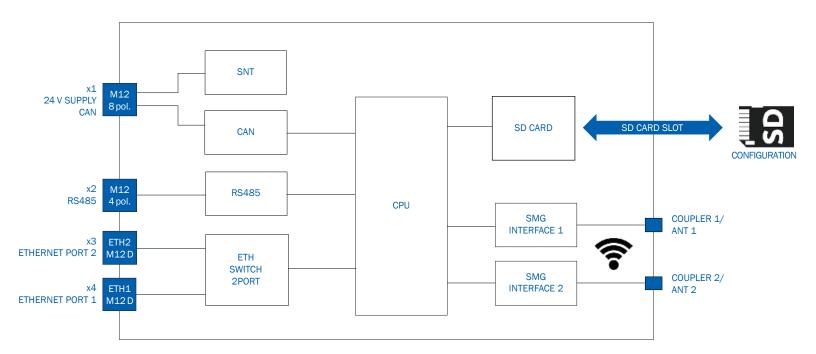

The vCOM interface has an Ethernet-based interface for connecting to the management (stationary side) and/or to the subordinate IO devices (mobile side). The SMGM and SMGX are optimized for both PROFINET-IO and PROFIsafe transmission.

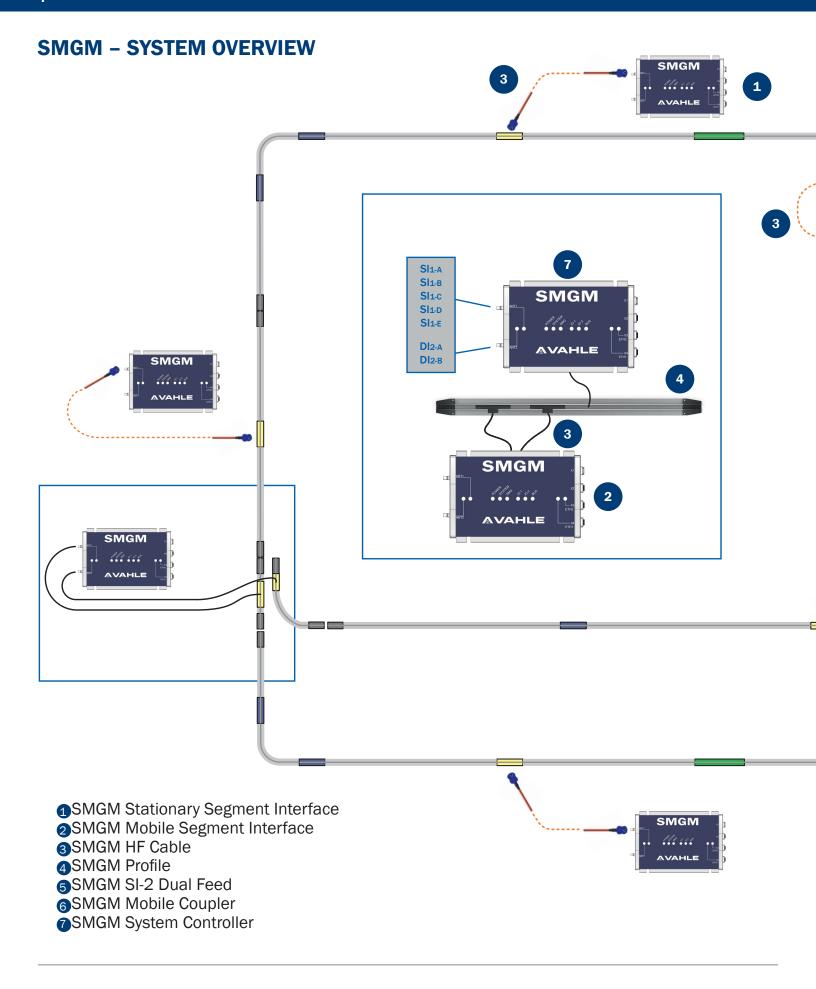

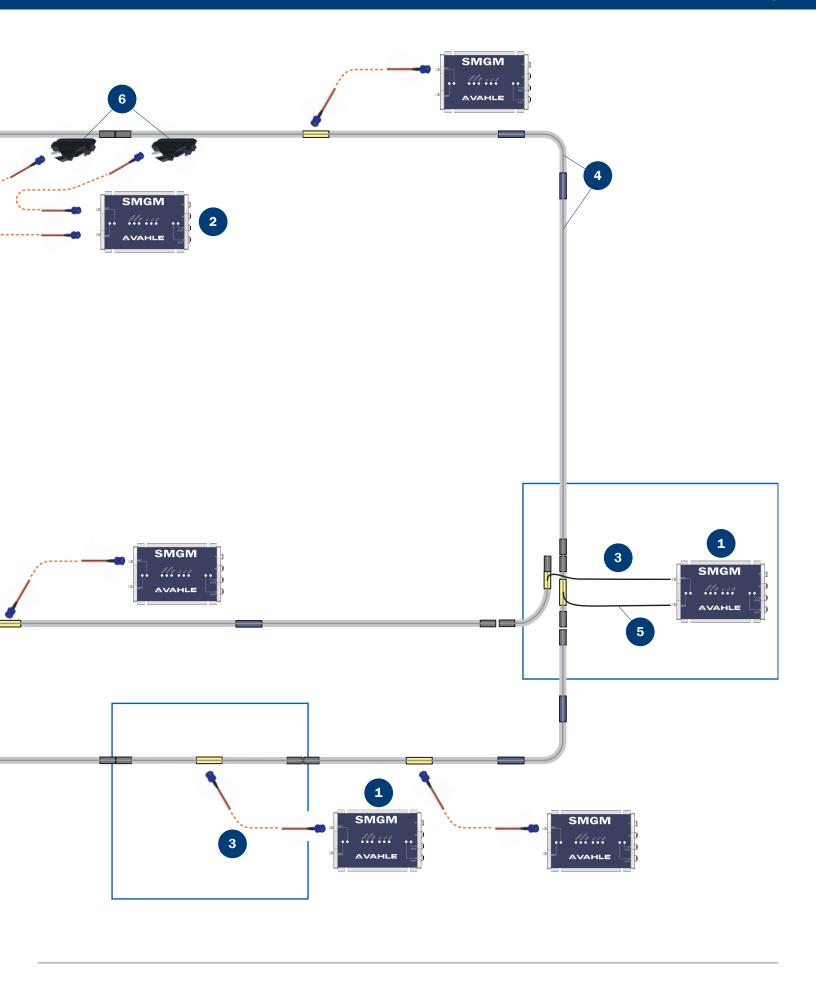

# **SMGM - DIAGNOSIS / SERVICE**


#### **COMPONENT AND SYSTEM QUALITY SURVEILLANCE**

All SMGM components are under surveillance via the system controller regarding their availability. If one of the components becomes inoperative, a respective prompt will be sent to the superordinate management component/controller.

For safe operation, compliance with different communication parameters (e.g. levels) is necessary. The stationary interface permanently monitors the compliance of these system-relevant parameters. If one of these parameters is not met, the system controllers receives an error message via Ethernet which is then forwarded to the superordinate management component/controller.


#### **DIAGNOSIS SEGMENT**

The diagnosis segment provides the opportunity of HF related diagnosis (communication/reception quality) of mobile SMGM interfaces and the associated data couplers. A mechanically and electrically separate SMG rail segment must be defined for this process.

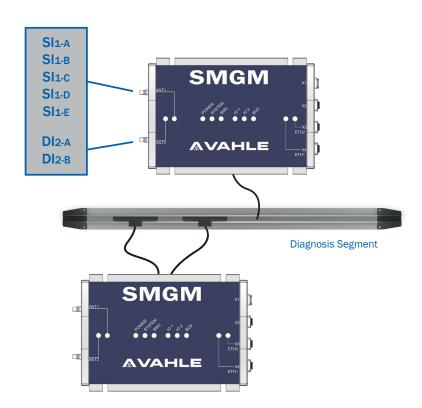

#### SERVICE - REPLACEMENT CONCEPT


All parameters relevant for operation are saved on the SD card of the SMG interface. During replacement, simply insert the SD card of the defective module into the SD card slot of the universally usable replacement unit (SMGM-RU). Module type and configuration are adopted via the SD card, without separate programming.

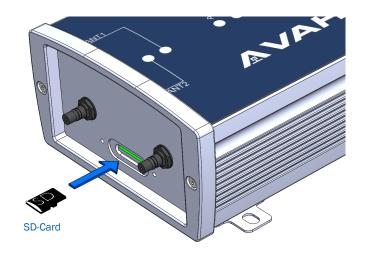


# **SMGM - SWITCH CONCEPT / SMGM-TC**

#### **SWITCH CONCEPT**

For interruption-free communication, a stationary source interface's HF signal is split at feed switches to both turnout segments via SMGM SI-2 module.

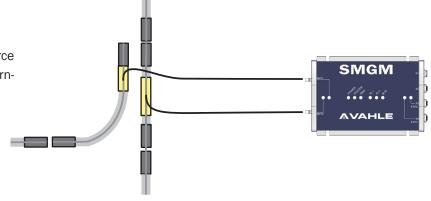

# **SMGX - SYSTEM OVERVIEW**

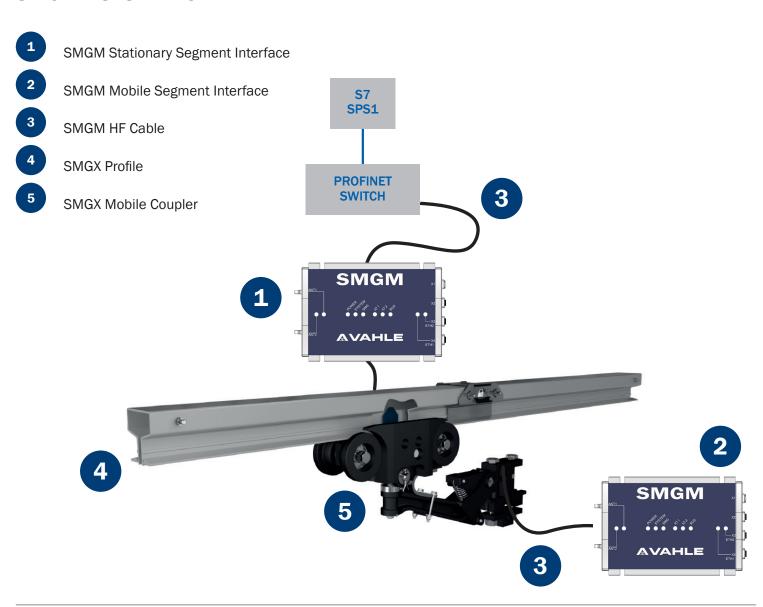

# **SMGM | SMGX - STATIONARY AND MOBILE INTERFACES**

# TECHNICAL DATA DIMENSIONS

#### **Electrical data**

#### **Ethernet interface**

Max. cable length....... 100 m (depending on the cable type)

#### **Connections**


#### **Ambient conditions**


Operating temperature 0°C...50°C Storage temperature.... -15°C...60°C

#### **Mechanical data**

Weight......850 g

#### **Operating conditions**

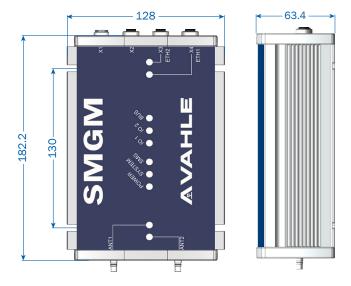

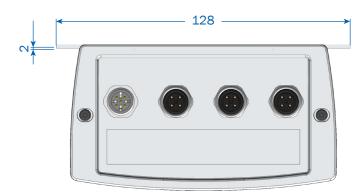

#### INFORMATION FOR USING INTERFACES

Only components of the same system can be used with each other. I.e. if the interface on the stationary side has "standard configuration," the interface on the mobile side must also have "standard configuration."

The SMGM-RU is a universal spare unit. It is the only interface that can adopt the configuration of any other interface.

# **SMGM | SMGX - STATIONARY AND MOBILE INTERFACES**

#### **SYSTEM TYPES**

#### **LITE** version


The LITE version is applied in applications with one segment and up to four mobile users.

#### **Standard version**

The Standard version is applied in applications with min. one segment and up tp 15 mobile users.

#### **Advanced version**

The Advanced version is applied in applications with one segment and up to three mobile users.

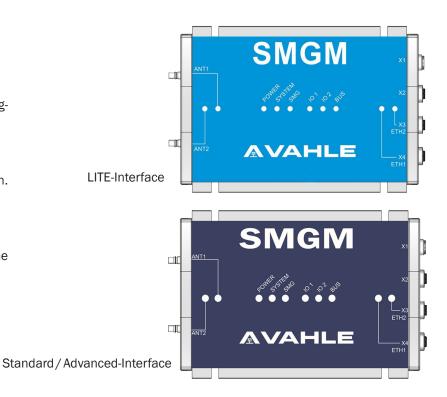

System	Lite		Standard		Advanced		Cross-Syste	m
Stationary Interfaces	Stationary Interfaces							
Description	SMGM-SI-1-	LITE	SMGM- SI-1	SMGM- SI-2	SMGM-SI-1-	ADV	SMGM-SC	SMGM-RU
No. of segments	1		1	2	1		1	(1)
Users per segment	4		15	15	3		1	(1)
Communication cycle	16 ms		16 ms	16 ms	8/16ms		16 ms	(1)
Process data transmission	Yes		Yes	Yes	Yes (prioritiz	ed)	Yes	Yes
Video data transmission	No		No	No	Yes		No	Yes <sup>(1)</sup>
Mobile Interfaces	Mobile Interfaces							
Description	SMGM-DI- ST1-LITE	SMGM-DI- ST2-LITE	SMGM-DI- ST2	BCC/ SMGM-PN	SMGM-DI- ST2-ADV	SMGM-DI- ST1-ADV	_	SMGM-RU
Transfer rate (gross)	100 Mbit/s	100 Mbit/s	100 Mbit/s	100 Mbit/s	100 Mbit/s	100 Mbit/s	100 Mbit/s	100 Mbit/s
Transfer rate (net)(2)							_	(1)
No. of mobile coupler	1	2	2	2	2	1	-	(1)
Process data transmission	Yes	Yes	Yes	Yes	Yes	Yes	_	Yes <sup>(1)</sup>
Video data transmission	No	No	No	No	Yes	Yes	-	Yes <sup>(1)</sup>
Max. Segment Length								
Туре	SMGX	SMGM	SMGM	SMGM	SMGM	SMGX	SMGM	(1)
Mid-feeding	200 m <sup>(3)</sup>	180 m <sup>(3)</sup>	120 m <sup>(3)</sup>	120 m <sup>(3)</sup>	140 m <sup>(3)</sup>	500 m <sup>(3)</sup>	_	(1)
No. of mobile users	4	4	15	15	3	3	-	(1)
No. of mobile couplers	1	2	2	2	2	1	_	(1)

<sup>(1)</sup> The properties of the SMGM-RU (Replacement Unit) depend on the configuration. (2) Depends on system configuration / up-/downlink ratio.

# **SMGM | SMGX - STATIONARY INTERFACES**


Description		System	Order No.
SMGM-SI-1-LITE	Segment Interface for one segment and max. four users	LITE	10014867
SMGM-SI-1	Segment Interface for one segment and max. 15 users	Standard	10011066
SMGM-SI-2	Segment Interface for two segments and max. 15 users	Standard	10011064
SMGM-SI-1-ADV	Segment Interface for one segment with ADV Configuration	Advanced	10016752
SMGM-SC	System Controller	Cross-System	10011071
SMGM-RU	Replacement Unit	*	10015129

# **SMGM | SMGX - MOBILE INTERFACES**



SMGM module

Description		System	Order No.
SMGM-DI-ST1-LITE	Device Interface LITE for one mobile coupler	LITE	10014897
SMGM-DI-ST2-LITE	Device Interface LITE for two mobile couplers	LITE	10014866
SMGM-DI-ST2	Device Interface Standard for two mobile couplers	Standard	10011069
SMGM-DI-ST1-ADV	Device Interface Advanced for one mobile coupler	Advanced	10016753
SMGM-DI-ST2-ADV	Device Interface Advanced for two mobile couplers	Advanced	10016755
SMGM-RU	Replacement Unit	*	10015129

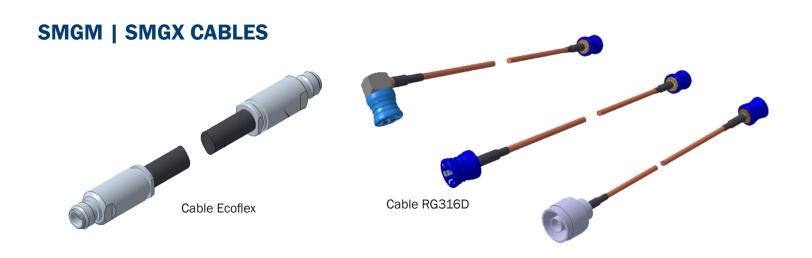

<sup>\*</sup> The properties of the SMGM-RU (Replacement Unit) depend on the configuration.

# SMGM | SMGX CABLES

RANGE OF PRODUCTS: <5 M LENGTH	Length	Order No.
Connection cables Plug 0° to 0°		
SMGM-VL-500-QLS-QLS-RG316D	500 mm	10011177
SMGM-VL-1000-QLS-QLS-RG316D	1000 mm	10012478
SMGM-VL-1500-QLS-QLS-RG316D	1500 mm	10012771
SMGM-VL-2000-QLS-QLS-RG316D	2000 mm	10012320
SMGM-VL-3000-QLS-QLS-RG316D	3000 mm	10012477
Connection cables Plug 90° to 0°		
SMGM-VL-500-QLS90-QLS-RG316D	500 mm	10009405
SMGM-VL-1000-QLS90-QLS-RG316D	1000 mm	10009406
SMGM-VL-1500-QLS90-QLS-RG316D	1500 mm	10011834
SMGM-VL-2000-QLS90-QLS-RG316D	2000 mm	10009407
SMGM-VL-2500-QLS90-QLS-RG316D	2500 mm	10014682
SMGM-VL-3000-QLS90-QLS-RG316D	3000 mm	10009408
SMGM-VL-4500-QLS90-QLS-RG316D	4500 mm	10022375
SMGM-VL-5000-QLS90-QLS-RG316D	5000 mm	10009409

RANGE OF PRODUCTS: >5 M LENGTH	Length	Order No.
Extension cables Plug N-socket to N-socket		
SMG-VL-1000-NB-NB-ECOFLEX15	1000 mm	10011174
SMG-VL-1500-NB-NB-ECOFLEX15	1500 mm	10014681
SMG-VL-2000-NB-NB-ECOFLEX15	2000 mm	10011175
SMG-VL-2500-NB-NB-ECOFLEX15	2500 mm	10011510
SMG-VL-3000-NB-NB-ECOFLEX15	3000 mm	10011512
SMG-VL-4000-NB-NB-ECOFLEX15	4000 mm	10011511
SMG-VL-5000-NB-NB-ECOFLEX15	5000 mm	10012879
SMG-VL-5500-NB-NB-ECOFLEX15	5500 mm	10022036
SMG-VL-7000-NB-NB-ECOFLEX15	7000 mm	10011838
Extension cables Plug 90° to N-socket		
SMGM-VL-500-QLS90-N-RG316D	500 mm	10011171
SMGM-VL-750-QLS90-N-RG316D	750 mm	10011567
SMGM-VL-1000-QLS90-N-RG316D	1000 mm	10008185
SMGM-VL-1500-QLS90-N-RG316D	1500 mm	10011192
SMGM-VL-2000-QLS90-N-RG316D	2000 mm	10011172
SMGM-VL-2500-QLS90-N-RG316D	2500 mm	10011509
SMGM-VL-3000-QLS90-N-RG316D	3000 mm	10011173
Extension cables Plug 0° to N-socket		
SMGM-VL-500-QLS-N-RG316D	500 mm	10011176
SMGM-VL-750-QLS-N-RG316D	750 mm	10011568
SMGM-VL-1000-QLS-N-RG316D	1000 mm	10012839
SMGM-VL-1500-QLS-N-RG316D	1500 mm	10014148

# **SMGM | SMGX - PROFILE**



Description	Order No.
SMGM-Profile incl. accessories	P9999996*
SMGX-Profile incl. accessories	P9999996*

# **SMGM | SMGX - PROFILE SUPPORT**



SMGM-Solo-Hanger




SMGX-Universalhanger

Description	Max. support distance	Order No.
SMGM-Solo-Hanger	1.5 m straight / 0.5 m curves	10010543
SMGX-Universalhanger	2.5 m	10019629

<sup>\*</sup> It is a matter of a pseudo order number. Our Techsales will check the profile components in detail by ordering.

# **SMGM | SMGX - FUNNEL**



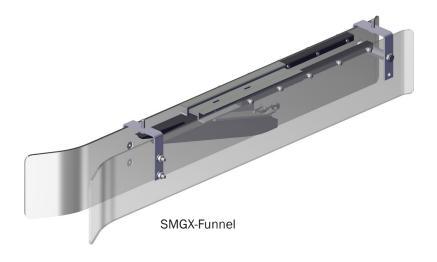

Description	Order No.
SMGM-Solo-Funnel	10016778
SMGM-Track-Funnel	10017265
SMGX-Funnel	10017003

# **SMGM | SMGX - MOBILE COUPLER**







SMGM-Coupler (long arm version)



SMGX-Coupler

Description	Tolerance	Order No.
SMGM system		
SMGM-ANTFE-SAFK-01 (EHB)	± 15 mm / ± 15 mm	10015821
SMGM-ANTFE-SAFK-02 (SKID)	± 15 mm / ± 15 mm	10015822
SMGM-ANTFE-SAMK-KDS+V	± 15 mm / ± 15 mm	10028661
SMGM-ANTFE-SAML-KDS+V	± 30 mm / ± 50 mm	10028660
SMGM-GPMK+V (2-pole base plate for SMGM)	-	10012066
SMGX system		
KWK-X:0-W150-45/60K-XB-N-4KT24-E50/A40+V	± 40 mm / ± 50 mm	10021964

## **SMGM - SUCTION HEADS**




Description		Order No.
KWK-M:I-0000-00/00G-SAUG-U10EHB-E/A15+V	Suction head for EMS applications	10025432
KWK-M:I-0000-00/00G-SAUG-U10Skid-E/A15+V	Suction head for SKID applications	10022431
RS-SSL12/225	Suction hose 225 mm	10025433
RS-SSL12/241	Suction hose 241 mm	10025434

## **SMGM - SYSTEM INTEGRATION**

#### **EXAMPLE: EMS APPLICATION\***

- In this application, the SMGM profile is mounted between the APOS Optic positioning system Datamatrix Code Strip and U10 profile as part of the EMS profile.
- The SMGM mobile coupler is integrated between the APOS Optic reading head and the U10 current collector.
- A special bracket provides a common mounting plate for the APOS Optic reading head, the U10 current collector and also for the SMGM mobile coupler.

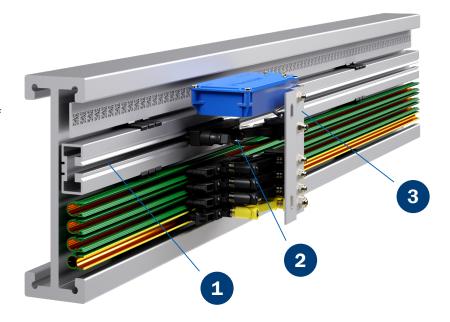






<sup>\*</sup> More system combinations are available on request, please contact our Techsales in case of need. Please take into account that the EMS components are not part of VAHLE delivery scope.


## **SMGX - HEATING**

An optional heating system for the SMGX slotted microwave guide extends the application range to adverse environments. The system can also be retrofitted in existing installations and can be combined with a heating system of a VAHLE conductor system.

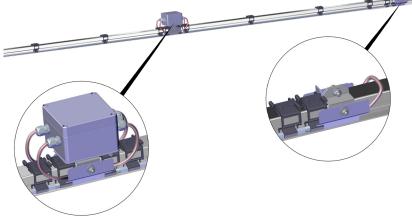

Description		Order No.
PROFIL-X:HZ-G-6000+V	U profile for heating wire – 6 m	10029009
PROFIL-X:HZ-HBH-004+V	Mounting bracket	10029008
PROFIL-X:HZ-ESE+V	End feed	10029022
PROFIL-X:HZ-ESD+V	Center feed	10029023
PROFIL-X:HZ-EK+V	End clamp	10029024
HZU-230/50-16-MU-F1,5-VA-R0000-GA66-S005	Switch cabinet with control system	10014358*
HL-0,10-EYCEX-5203-PTFE-260-750	Heating wire	0196381/00*

# **SMGX FOR STS CRANES (FESTOONLESS SOLUTION)**

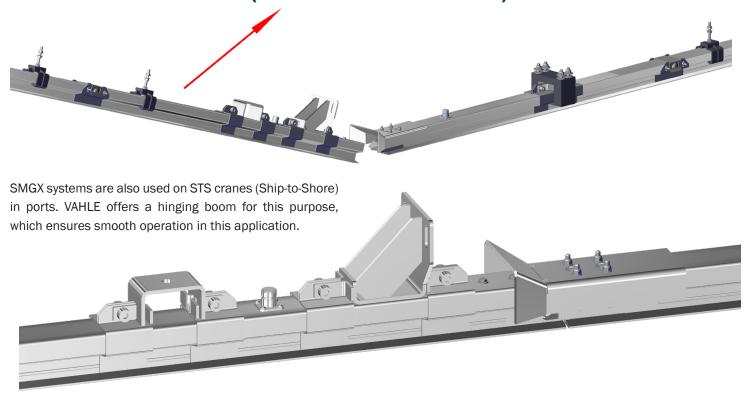

Description	Order No.	
PROFIL-X:E-KLA-01+V	Hinging boom for SMGX on STS crane	10028382
PROFIL-X:E-G-0352-PV:A1-0-VERSCHL-EA:0+V	Protective cover as termination of the SMGX profile	10022151

<sup>\*</sup> Plant/project dependent

# AVAHLE

VAHLE, Inc.

407 Cane Island Parkway Katy, Texas 77494, USA

Phone: +1 713.465.9796 Fax: +1 713.465.1851

sales.usa@vahle.com www.vahle.com

You can find your local contact at www.vahle.com/contact